

# How to Update MP4 Player Firmware

-- Classic 2004 Version to Ver1.2.07

## Note

1. Download the latest firmware from official website. (DPV1.2.07\_for\_2004\_eng.zip)
2. Please make sure that Power Adaptor is always plugged in to ensure sufficient power supply during the process of firmware upgrade.

## Installation Guide

1. Connect MP4 Player with Power Adaptor and turn the device on.




\* If your [Main Menu] of the MP4 Player is different from this image, please DO NOT use this version of firmware to upgrade to avoid possible severe damages to your MP4 Player. You will have to send your MP4 Player back to the original manufacturer at some cost to repair. Warranty does not include conditions such as repairing for firmware upgrade failure.

2. Connect MP4 Player and PC via Mini-USB Cable. A new USB device dialog will pop out on your PC screen.



3. Unzip the latest firmware file and transmit the file "update.bin" to the root path of "DVX-POD7010".
4. Unplug Mini-USB Cable and make sure the status of device is Powered-Off.
5. Press "Previous/Reverse button" and "Power On/Off button" at the same time until the device boots up. When the time display on the lower right corner freezes, then release the 2 buttons. DO NOT touch any button while the system is still updating the firmware.

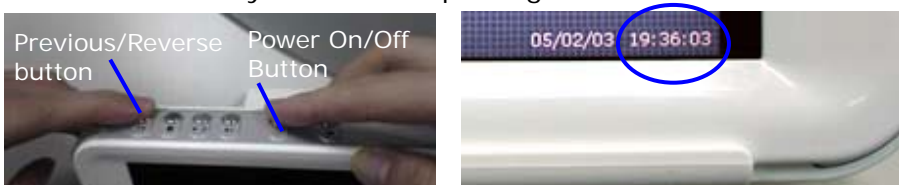

6. After 3-5 minutes, the system will shut down by itself.
7. Restart the MP4 Player after about 2 min and enter [SETUP/Function Menu]. The Firmware Version will be listed as Ver1.2.07. Now the firmware update procedure is completed, and you can use all the features of the new firmware.



Firmware Version: Ver1.2.07

Copyright(c) 2005 MobiNote Technology Corp.